


DETAIL 5

USE PROJACK DIRECTLY UNDER THE JOIST OR BEARER TO CORRECT THE FALL IN THE SUBSTRATE. FOR HEIGHTS 5MM - 13MM USE A SINGLE BASE AND WEDGE.

FOR HEIGHTS 15MM AND ABOVE USE A BASE, PACKER, TOP AND WEDGE.

CHANGE THE WEDGE POSITION FOR FINE HEIGHT ADJUSTMENT.

5MM - 14MM

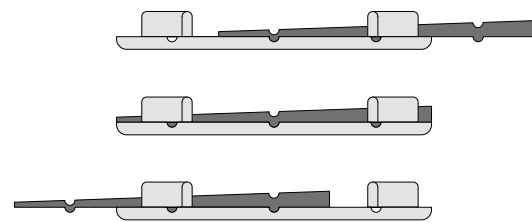

15MM AND ABOVE

