


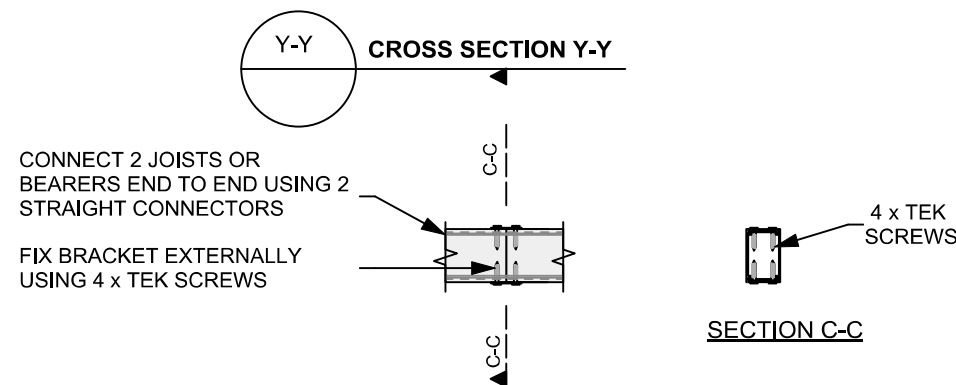


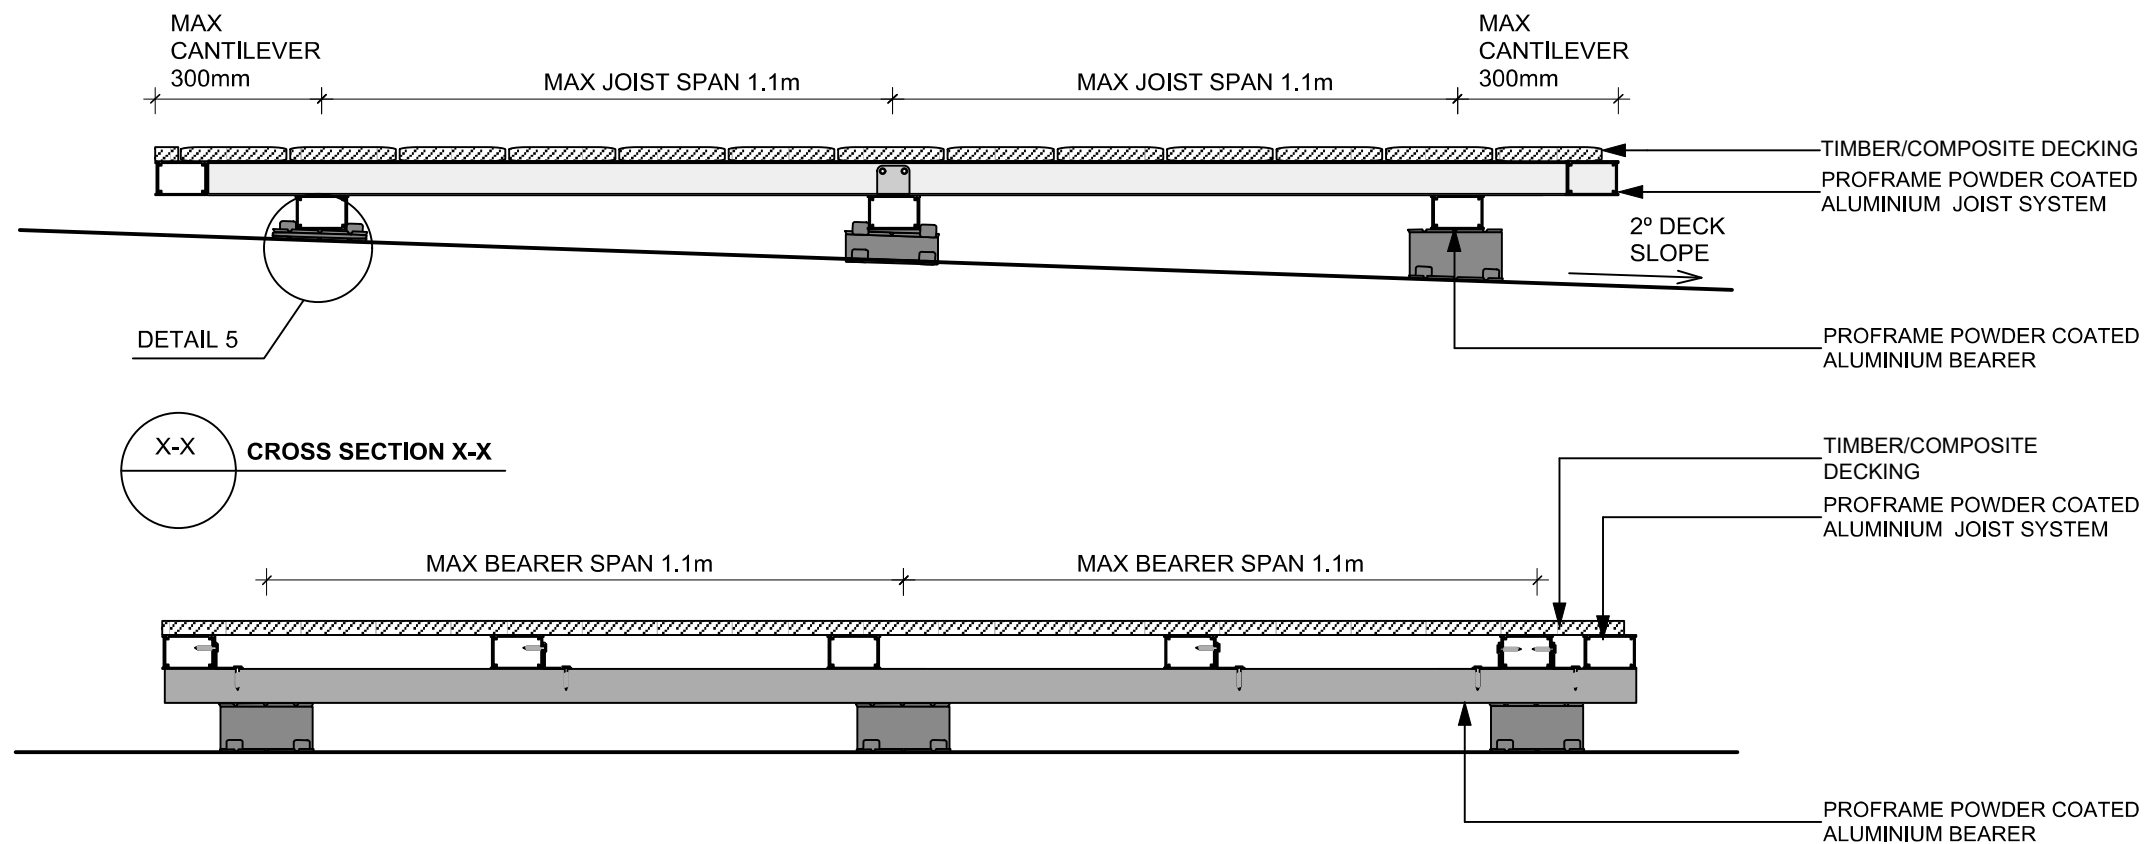

OPTION A
D4 PROFRAME JOIST & BEARER CONNECTIONS

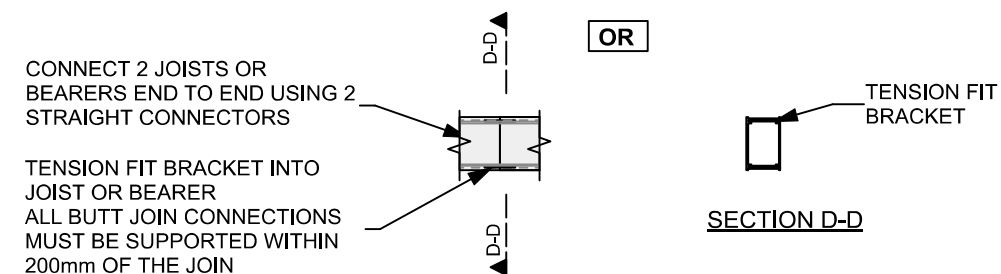


OPTION B
D4 PROFRAME JOIST & BEARER CONNECTIONS

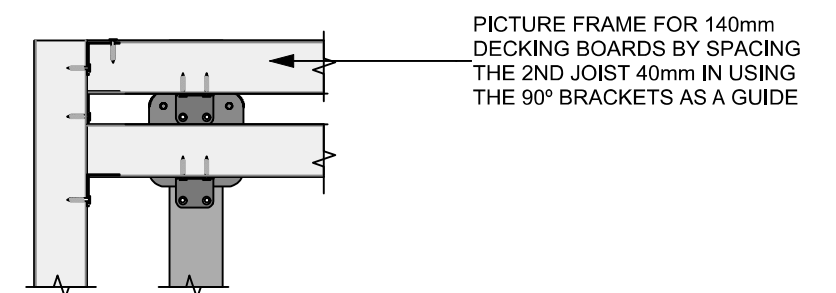

D3 PROFRAME JOIST SPACING FOR DECKING BOARDS

USE PROJACK DIRECTLY UNDER THE JOIST OR BEARER TO CORRECT THE FALL IN THE SUBSTRATE FOR HEIGHTS 5mm - 13mm USE A SINGLE BASE AND WEDGE FOR HEIGHTS 15mm AND ABOVE USE A BASE PACKER, TOP AND WEDGE. CHANGE THE WEDGE POSITION FOR HEIGHT ADJUSTMENT

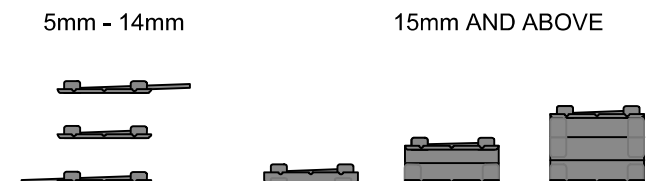

D5 PROJACK STACKER HEIGHTS